

USERS GUIDE

EVOMAX

30, 40, 60, 80, 100, 120, 150
30P, 40P, 60P, 80P

For installation guide see reverse of book

When replacing any part on this appliance, use only spare parts that you can be assured conform to the safety and performance specification that we require.
Do not use reconditioned or copy parts that have not been clearly authorised by Ideal.


EVOMAX

**30, 40, 60, 80, 100, 120, & 150
30P, 40P, 60P & 80P**

Natural Gas & LPG

PI No. 86 CL 166

Destination Countries: GB, IE

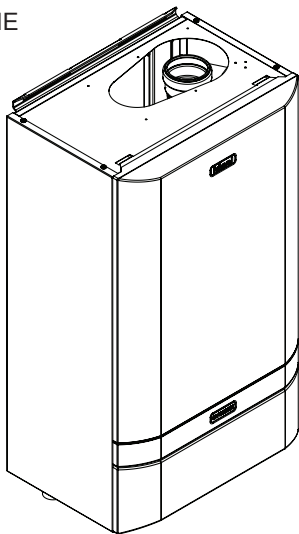

Introduction

The **EVOMAX** is a wall mounted, room sealed, super efficient condensing boiler featuring full sequence automatic spark ignition and fan assisted combustion.

Due to the very high efficiency, condensate is produced from the flue gases and this is drained to a suitable disposal point through the plastic waste pipe at the bottom of the boiler. A condensate 'plume' will also often be visible at the flue terminal.

Safety

Current Gas Safety (Installation & Use) Regulations or rules in force.

In your own interest, and that of safety, it is the law that this boiler must be installed and maintained by a Gas Safe Registered Engineer or in IE a competent person, in accordance with the above regulations.

The appliance should be serviced at least once a year by a Gas Safe Registered Engineer or in IE a competent person.

It is essential that the instructions in this booklet are strictly followed, for safe and economical operation of the boiler.

Electricity Supply

The appliance must be earthed.

Supply 230 V - 50 Hz. The fusing should be 3A (5A for 100).

This appliance is intended to be connected to the supply via a double-pole switch, having a 3mm contact separation in both poles, serving only the boiler and system controls. Alternatively, a 3-pin UNSWITCHED socket may be used.

Important Notes

- This appliance must not be operated without the casing correctly fitted and forming an adequate seal.
- If the boiler is installed in a compartment then the compartment **MUST NOT** be used for storage purposes.
- Do not store objects around or on the boiler, and keep access clear at all times.
- Do not obstruct ventilation ducts, grilles or openings in the boiler room, room space or compartment that the appliance is installed in, or the passage of combustion and ventilation to the boiler.
- Do not turn off the boiler if it is to be left unattended in frosty weather.
- If it is known or suspected that a fault exists on the boiler then it **MUST NOT BE USED** until the fault has been corrected by a Gas Safe Registered Engineer or in IE a competent person.
- Flammable materials must not be placed in close proximity to the appliance. Materials giving off flammable vapours must not be stored in the same room as the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

In cases of repeated or continuous shutdown a Gas Safe Registered Engineer or in IE a competent person should be called to investigate and rectify the condition causing this and carry out an operational test after each intervention on the device. Only the manufacturers original parts should be used for replacement.

Minimum Clearances

Clearances of **300mm (12")** below, **25mm (1")** at the sides and **450mm (17 3/4")** at the front of the boiler casing must be allowed for servicing.

To light the boiler (Refer to Frame 1)

1. CHECK THAT THE ELECTRICITY SUPPLY TO THE BOILER IS OFF.
2. Set the boiler to standby.
3. Switch on the electricity supply to the boiler and check that all external controls, e.g. programmer, room thermostat, etc are on. Allow the boiler to carry out a self check.
4. Set the boiler to winter.


The boiler will commence the ignition sequence, supplying heat to the system when required.

All **Gas Safe Registered Engineers** carry a Gas Safe Register ID card, and have a registration number.

Both should be recorded in your Log Book. You can check your installer by calling Gas Safe Register direct on 0800 4085500.

CAUTION. To avoid the possibility of injury during the installation, servicing or cleaning of this appliance care should be taken when handling edges of sheet steel components.

1 BOILER CONTROLS / DISPLAY

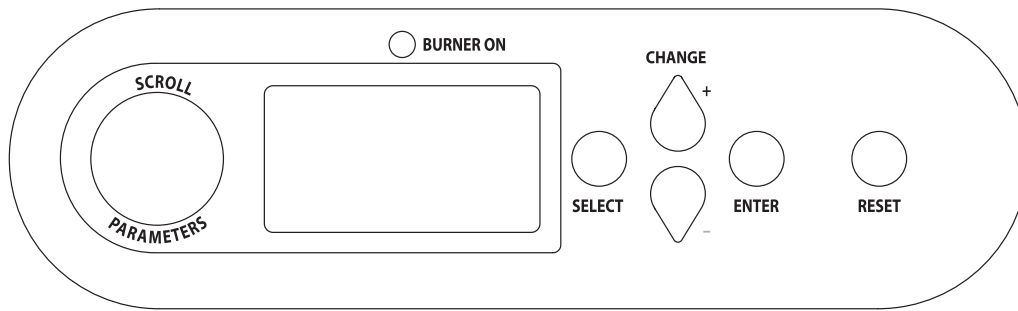

Standby Mode

If the boiler has been switched to Standby Mode the following screen will be displayed
No Boiler operation will take place with this setting. See Frame 38 to change to Summer or Winter setting

Standby Mode
For Central Heating
select Winter Mode
For Hot Water
select Summer or Winter

Summer Mode

If the boiler has been switched to Summer Mode a screen similar to the following will be displayed (line 5 may vary depending on setup)
Domestic Hot Water operation will take place with this setting but Central Heating will not.
See Frame 38 to enable Central Heating by changing to Winter setting

Summer Mode
For Central Heating
select Winter Mode
No Hot Water Demand
Switched Live Off

Winter Mode

If there is no current Heat Demand a screen similar to the following will be displayed (line 5 may vary depending on setup)
Line 5 indicates "Switched Live" or "OpenTherm" or "0-10V" depending on which controls are connected to the boiler

Winter Mode
No Central Heating
Demand
No Hot Water Demand
Switched Live Off

Domestic Hot Water Mode (DHW Thermostat)

If there is an ongoing Domestic Hot Water Demand using a DHW Thermostat screens similar to the following will be displayed
Line 2 indicates whether Switched Live or OpenTherm is controlling the boiler
Line 3 indicates the current operating State (Pre-Purge or Ignition or Burner On or Pump Overrun)
Burner Power and Flow Temperature will vary as the boiler operates

Hot Water
DHW Switched Live On
Burner On
DHW Thermostat
Flow Temp 80°C



Hot Water
Burner Power 100%
Burner On
DHW Thermostat
Flow Temp 80°C

Central Heating Mode

If there is an ongoing Central Heating Demand screens similar to the following will be displayed
Line 2 indicates whether Switched Live or OpenTherm is controlling the boiler
Line 3 indicates the current operating State (Pre-Purge or Ignition or Burner On or Pump Overrun)
Outside temperature will only be shown if an outside sensor is connected to the boiler
Burner Power and Flow Temp will vary as the boiler operates
See Frame 38 for adjusting Flow Setpoint

Central Heating
CH Switched Live On
Burner On
Flow Setpoint 80°C
Flow Temp 80°C



Central Heating
Burner Power 100%
Outside Temp' 10°C
Flow Setpoint 80°C
Flow Temp 80°C

Boiler Frost Protection Mode

If the boiler flow temperature drops below 5°C screens similar to the following will be displayed
Line 3 indicates the current operating State (Pre-Purge or Ignition or Burner On or Pump Overrun)
Outside temperature will only be shown if an outside sensor is connected to the boiler
Burner Power and Flow Temp will vary as the boiler operates

Boiler Frost Protect
Burner Power 100%
Burner On
Frost Setpoint 5°C
Flow Temp 80°C



Boiler Frost Protect
Burner Power 100%
Outside Temp' 10°C
Frost Setpoint 5°C
Flow Temp 80°C

2 EVOMAX USER INTERFACE - BASIC OPERATING INSTRUCTIONS

SETTING FLOW TEMPERATURE

Press SELECT and a screen similar to the following will be displayed
The kW output number in the 1st line will vary depending the maximum output of the boiler

<u>Ideal Evomax 80kW</u>
Normal Operation
Set Flow Temp'
Set DHW Temp'

Rotate the KNOB clockwise until a screen similar to the following is displayed

<u>Ideal Evomax 80kW</u>
Normal Operation
Set Flow Temp'
Set DHW Temp'
Set Off/Sum/Win

Press SELECT and a screen similar to the following will be displayed

<u>Set Flow Temp'</u>
80°C

Press + and - to change to the required setting and then press ENTER to store

Rotate the KNOB anti-clockwise until Normal Operation is highlighted again and press SELECT to return to normal operation

SETTING SUMMER, WINTER AND STANDBY OPERATION

Note that Standby Mode will disable Domestic Hot Water and Central Heating, Summer Mode will disable Central Heating

Press SELECT and a screen similar to the following will be displayed
The kW output number in the 1st line will vary depending the maximum output of the boiler

<u>Ideal Evomax 80kW</u>
Normal Operation
Set Flow Temp'
Set DHW Temp'

Rotate KNOB clockwise until a screen similar to following is displayed

<u>Ideal Evomax 80kW</u>
Set DHW Temp'
Set Off/Sum/Win
Out' Sensor Slope
Normal Operation

Press SELECT and a screen similar to the following will be displayed

<u>Set Off/Sum/Win</u>
Standby
Summer
Winter
Press - for more

Press + and - to change to required setting, press ENTER to store

Rotate the KNOB anti-clockwise until Normal Operation is highlighted again and press SELECT to return to normal operation

To shut Down the Boiler

1. For short periods

Set the external controls to OFF. Wait 4 minutes and then isolate the mains supply to the boiler.

2. For longer periods

Set the external controls to OFF. Switch the electricity supply to OFF. For longer periods the entire system should be drained, including the domestic hot water supply.

To Relight the Boiler

Refill the system if it has been drained, taking care to ensure no air is in the boiler or system.

Repeat the procedure detailed in 'To light the boiler'.

Frost Protection

The EVOMAX boiler has built into its control system the facility to protect the boiler only against freezing.

Note.

This may not protect remote parts of the system, in which case a separate frost thermostat should be fitted.

Boiler Overheat Thermostat

Boiler overheating is detected by electrical sensors connected to the boiler control module. If the boiler overheats it will shut down and the display will show Overheat Lockout. Press the reset button and the boiler will relight. If the fault recurs turn off the boiler and consult a Gas Safe Registered Engineer or in IE a competent person.

Condensate Drain

The condensate drain must not be modified or blocked.

Blockage of the condensate drain, caused by debris or freezing, can cause automatic shutdown of the boiler or leakage from the condensate trap mounted on the bottom of the boiler.

If freezing is suspected and the pipe run is accessible an attempt may be made to free the obstruction by pouring hot water over the exposed pipe and clearing any blockage from the end of the pipe. If this fails to remedy the problem the assistance of a Gas Safe Registered Engineer or in IE a competent person should be sought.

Escape of Gas

Should a gas leak or fault be suspected contact your local gas supplier without delay.

Do NOT search for gas leaks with a naked flame.

Cleaning

For normal cleaning simply dust with a dry cloth.

To remove stubborn marks and stains use a damp cloth and mild detergent.

DO NOT use abrasive cleaning materials.

Ideal stelrad Group
P.O. Box 103, National Ave,
Kingston upon Hull, HU5 4JN.
Telephone: 01482 492 251 Fax:
01482 448 858. Registration No.
London 322 137.

Ideal stelrad Group. pursues a
policy of continuing improvement
in the design and performance
of its products. The right is
therefore reserved to vary
specification without notice.



Ideal Stelrad Group

Ideal Consumer Helpline Tel: 01482 498 376

www.idealheating.com